

Code Error

- 20 Pulser Fail
- 21 Non-existent memory
- 22 Not used
- 23 Grade assignment changed
- 24 Conversion factor changed - not programmed
- 25 Two-wire / stand alone changed
- 26 No conversion factor table
- 27 Side A two-wire ID changed
- 28 Side B two-wire ID changed
- 29 Pump time out error
- 30 Vapor/Vav failed sides or Vapor Sense
- 31 Totals data error
- 32 Pulser count error
- 33 VaporVac fail or push-to-start button activated
- 34 Battery charge low
- 35 Configuration data error
- 36 Unit type configuration code changed
- 37 PIN code 1 changed
- 38 PIN code 2 changed
- 39 Cash/credit option changed
- 40 Master reset jumper in place
- 41 Side exists option changed
- 42 PPU option changed
- 43 Not used
- 44 Pump handle on at power up
- 4301 Communication time-out
- 4302 Blend controller busy
- 4303 Communication limit
- 4304 Communication limit
- 4305 Received data error
- 4306 Received block error
- 4307 Blends not programmed
- 4308 No blend table
- 4311 Lo product low flow
- 4312 Hi product low flow
- 4313 Lo product no flow
- 4314 Hi product no flow
- 4315 Hi product contaminated by lo
- 4316 Lo product contaminated by hi

4317 Lo product surge